


ASSEMBLY INSTRUCTIONS

FULL FLOOR BED WITH RAILINGS

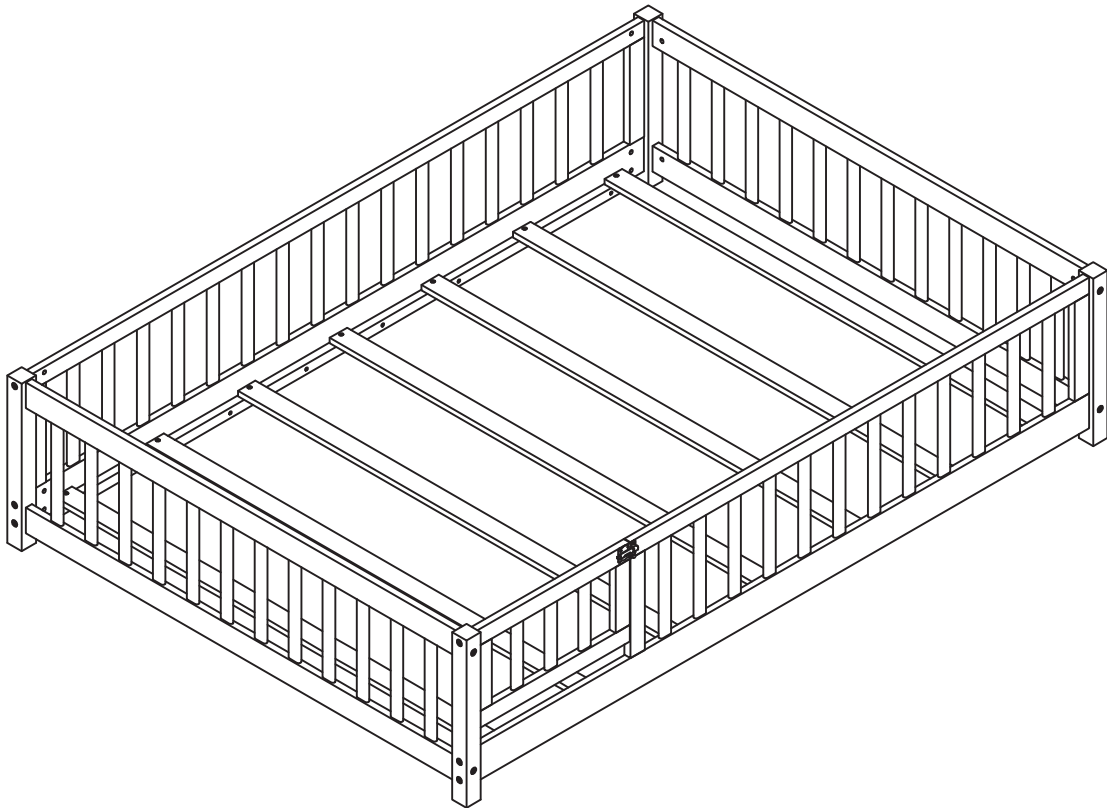


DBC B-PQT-34958

DBCH-NBB-34956








DBCK-CVD-48386

DBCZ-NFJ-48387



Detail View

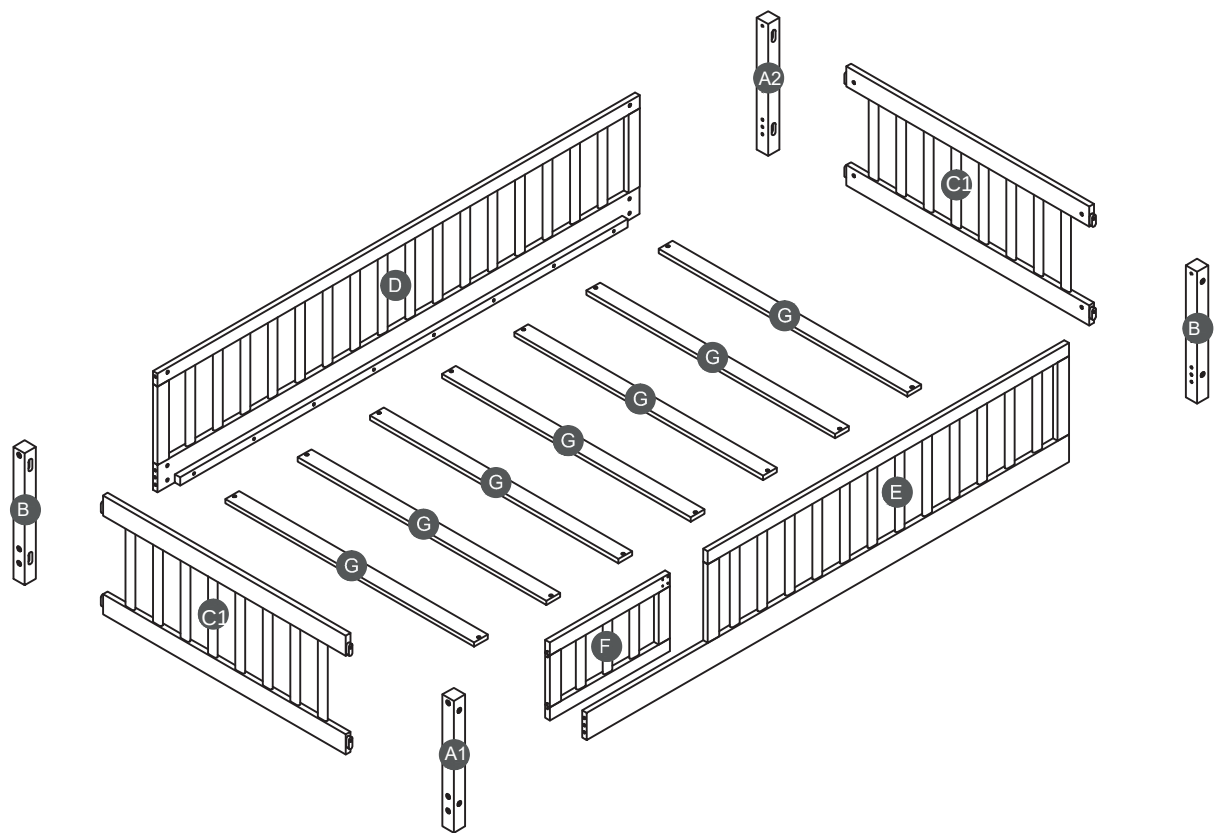


Part List

A1	Leg-Left Front: 1pc 	B	Leg-Left Back: 1pc 	C1	
A2	Leg-Right Back: 1pc 		Leg-Right Front: 1pc 		Frame HB & FB - 2pcs
D		E		F	
	Guard rail -Back: 1pc		Guard rail -Front: 1pc		Door - 1pc
G					
	Slat - 7pcs				

Hardware List


1	 Ø10*30mm Wood dowel (4pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (19pcs)	3	 Ø4*30mm Wood screws (14pcs)
4	 5mm*30mm*238mm Salat size (1pc)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)	6	 (1/4")4.5*58mm Allen key (1pc)
7	 60*40*10mm Lock (1pc)	8	 Ø3 *15mm Wood screws (16pcs)	9	 50*24*6mm(135°) Hinges (2pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

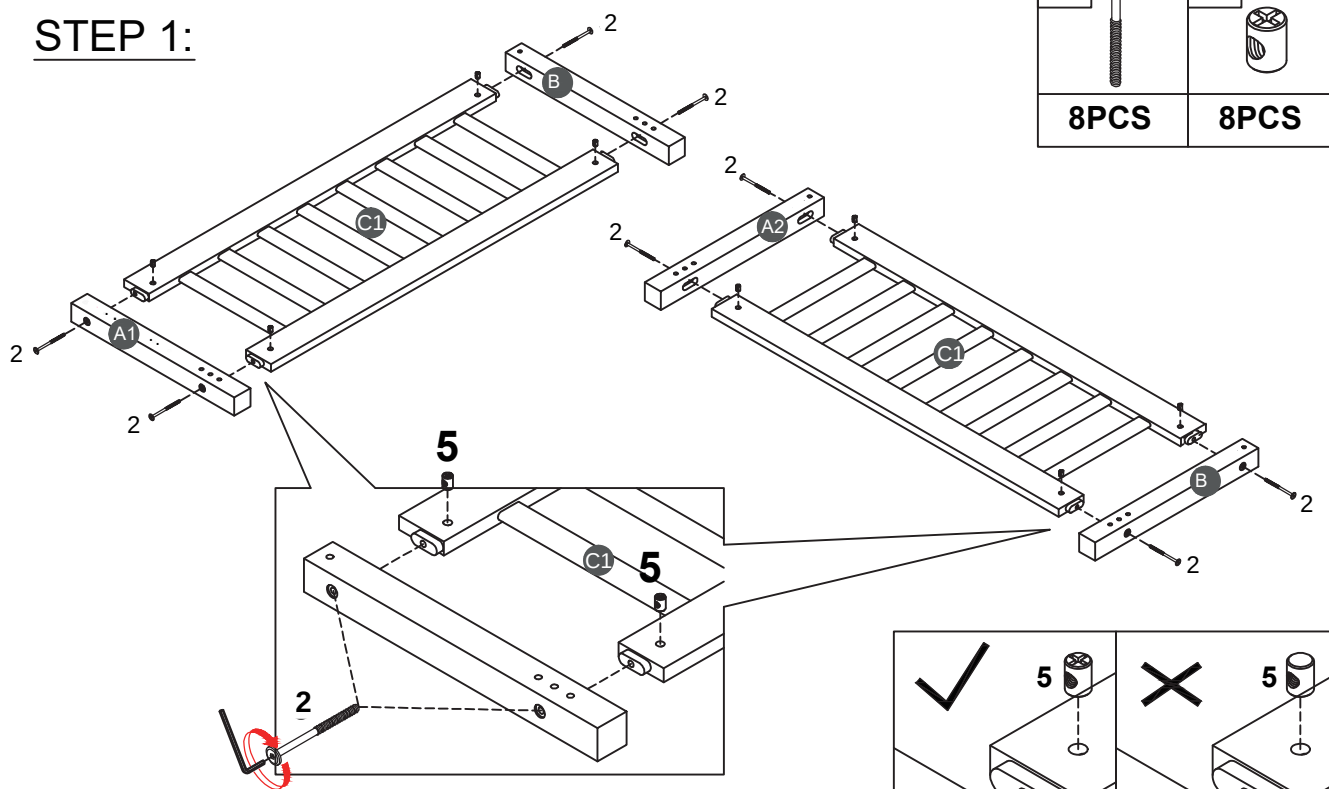


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

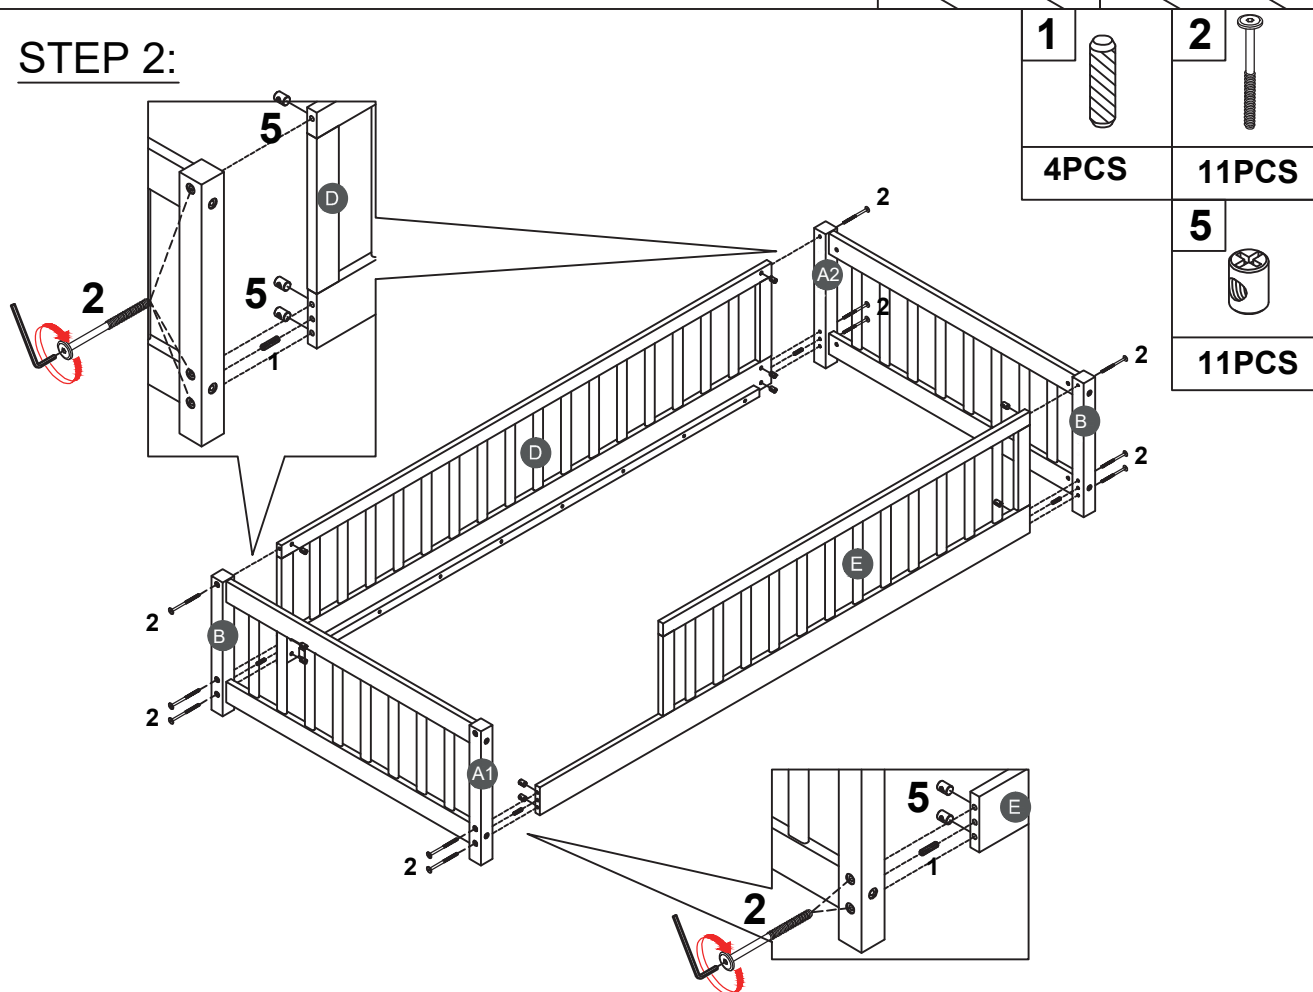

STEP 3:


9	8
	
2PCS	6 PCS

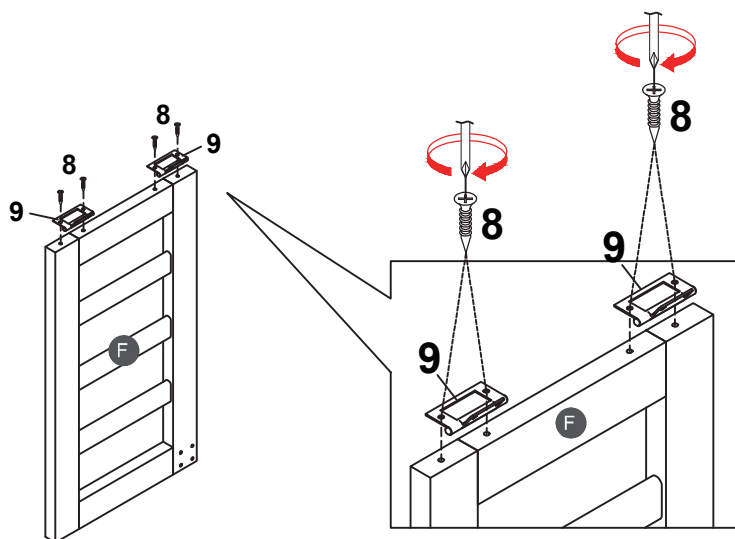


STEP 4:


8

4PCS


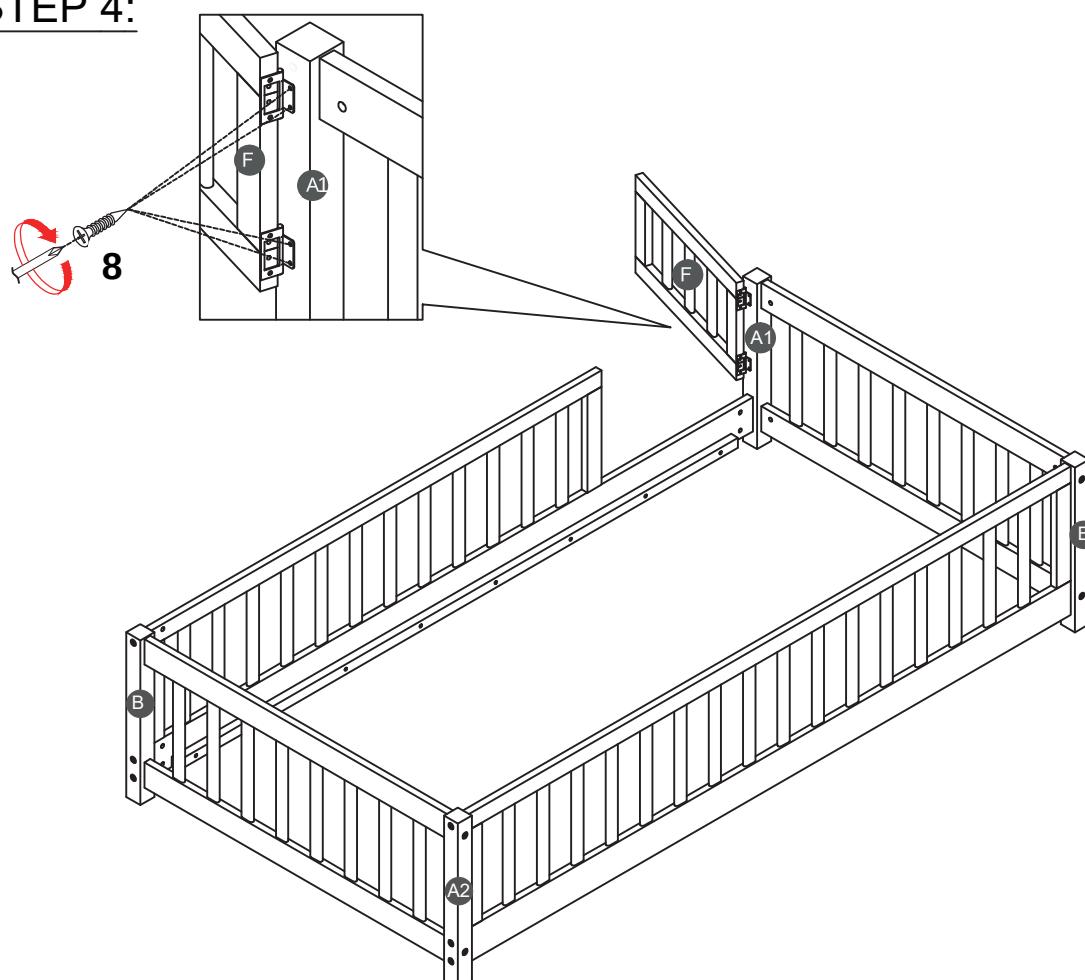


STEP 3:

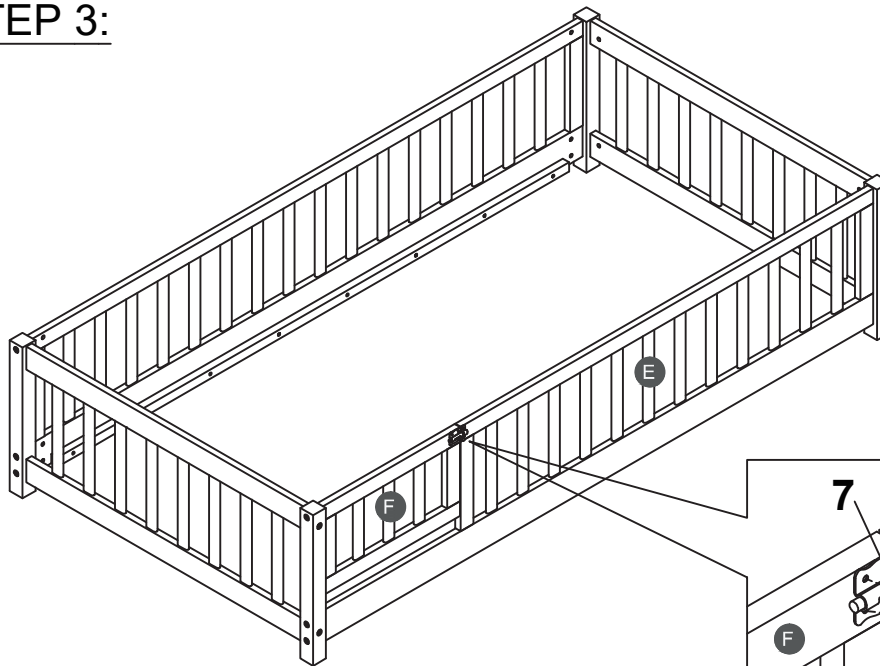


7	8
	
1PC	6PCS

STEP 4:

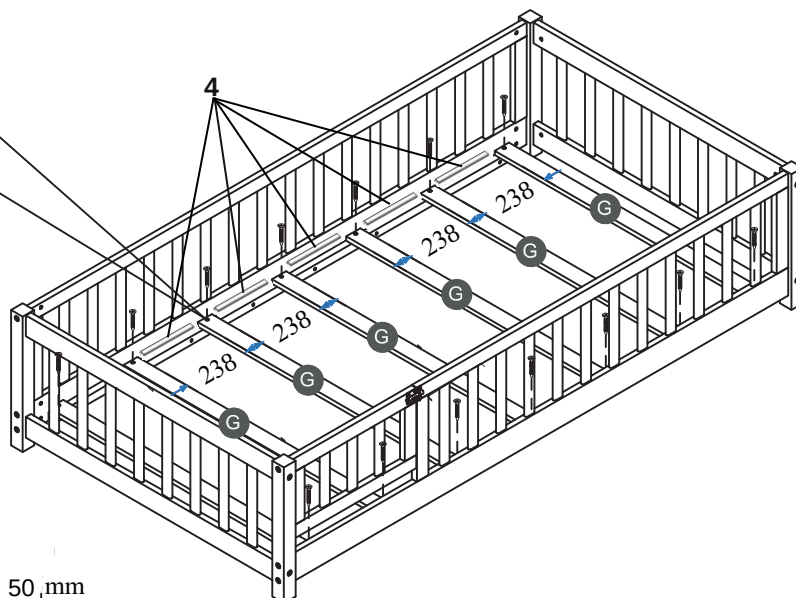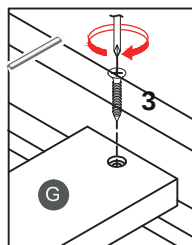

3	
14PCS	
4	
1 PCS	

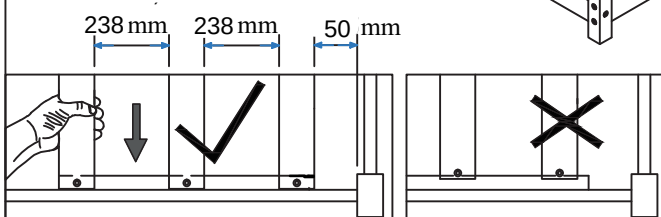

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.